MACNICA

2022年6月

V3.0

フィネッセカンパニー

技術統括部

- Licenseの取得に必要な情報
 - 。オペレーション・システム(OS)の詳細情報
 - Window or Linux など
 - Software ID
 - Disk ID(HDD ID) または MAC ID(NIC ID)



• Microchip社 Web

 Products => FPGAs and PLDs => Hardware Design => Licensing または

<u>https://www.microchip.com/en-us/products/fpgas-and-plds/fpga-and-soc-design-tools/fpga/licensing</u>



• Microchip社 Web

- 有償版ライセンス: "Purchase a Libero SoC Design Suite License" を選択
- 。 無償版ライセンス: "Register a Free License" を選択





● Microchip社の"Microchip Account" に登録

- 。未登録:"New Customers"で登録
- 。登録済: "Enter email address…"と"Password"を入力しLogin





● Licenseの種類を選択

- 。有償版: "Register Purchased Software ID"を選択
- 。 無償版: "Request Free License" を選択





- 有償版
 - 。"Software ID"を入力し"Submit"を選択

Register Purchased Product	×
Please enter your unique software ID number to ge license	nerate a Libero Gold or Platinum or IP Core
Software ID:*	ubmit
	Close

- 無償版
 - "Libero Silver 1 Yr Disk ID NL License"
 - ノードロック・ライセンス。PC固定
 - "Libero Silver 1 Yr Floating License for Windows/Linux Server"
 - フローティング・ライセンス。ネットワーク・ライセンス
 - 。 いずれかの"Register"を選択

Microchip Part	Туре	Register License
Libero Evaluation Floating License for Windows or Linux Server	Libero	Register
Libero Evaluation Node Locked License for Windows	Libero	Register
Libero Silver 1 Yr DiskID NL License	Libero	Register
ibero Silver 1Yr Floating License for Windows/Linux Server	Libero	Register
PolarFire Seminar license for windows PC	Libero	Register
SmartHLS 1 Year Node Locked License for Windows	SmartHLS	Register
SmartHLS 1 Year Floating License for Windows or Linux Server	SmartHLS	Register
CoreVECTORBLOX OBS FLOATING MACID	VectorBlox	Register
CoreVECTORBLOX OBS nodelocked DISKID	VectorBlox	Register
egacy IP Core RTLsource Node Locked License	IP Core	Register
egacy IP Cores RTL Floating MACID license	IP Core	Register
egacy IP Cores RTL Floating Solaris (HOSTID) License	IP Core	Register
Synopsys Synphony Model Compiler AE 1 Yr for Windows	Synphony Model	Register



C) Mathica, Inc

● 無償版

- "Libero Silver 1 Yr Disk ID NL License"
- 。 "DiskID:" を入力し"Register" を選択

Register Product		×
Register Libero Silver 1	Yr DiskID NL License with Software ID	
DiskID:*	Register	
Your Disk ID is an 8 character h The DiskID of the C:\ Drive mus The DISK ID is the computer ha	exadecimal number set with valid characters A-F and/or 0-9 in groups o t be used even if the software is installed on another drive. Remote Desk rd drive's serial number, also called Disk Serial Number. It is typically the	f 4 separated by "-". Ex: "A085-AFE9". ctop is not supported. 2 "C" drive in your computer. The Disk ID
is an 8 character hexadecimal r To obtain your computer's Disk C:> Vol C:	iumber of the form, xxxx-xxxx, similar to "A085-AFE9". ID, type the following at a DOS or Command Prompt:	
Enter your C drive's Disk ID nur	nber into the license registration page window where indicated.	
		Class

● Windows OSでのDisk ID(HDD ID)の取得方法

。 コマンドプロンプトにて下記コマンドを入力しエンターキーを押下

- vol c:

🔤 管理者: コマンド プロンプト	
Microsoft Windows [Version 6.1.7601] Copyright (c) 2009 Microsoft Corporation. All rights reserved.	*
C:¥>vol c: ドライブ C のボリューム ラベ ルは Win dows7_OS です ボリューム シリアル番号は <mark>ICFA-FD3A で</mark> す	
C:¥>_	
	T



● 無償版

- "Libero Silver 1 Yr Floating License for Windows/Linux Server"
- 。"MAC ID:"を入力し"Register"を選択

legister Product ×
Register Libero Silver 1Yr Floating License for Windows/Linux Server with Software ID
MAC ID:* Register
Your MAC ID is a 12 character hexadecimal number set with valid characters A-F and/or 0-9. Ex: "1234abcd5678". MAC ID is required for Linux Floating, Linux Node Locked, or Windows Floating, or Synplicity "Server-Based Node-Locked" (SBNL) licenses.
Linux Node Locked or Floating: To obtain the MAC ID, from the Command Prompt type: /sbin//fconfig
The Ethernet/MAC ID address will be displayed. The MAC ID address is a twelve character hexadecimal number, similar to "00A0C982BEE3". Enter your MAC ID into the registration page window where indicated.
Windows Floating or Synplicity "Server-Based Node-Locked" (SBNL) Licenses: To obtain the PC MAC ID, type the following at a DOS or Command Prompt:
C:> Imutil Imhostid or You can also use: C:> <pre>ccel_installation</pre> (privation in the state of the stat
The Ethernet/MAC ID address will be displayed. The MAC ID address is a twelve character hexadecimal number, similar to "00A0C982BEE3". Enter the 12 character MAC ID into the registration page window where indicated.
In some PC configurations, there can be more than one MAC ID. Use the MAC ID that you know will be the "active" ID. Some users may configure their laptops to have the wired MAC ID for docked laptop use and the wireless MAC ID for undocked use. Tools using the MAC ID depend on the MAC ID being active for use.
Close

● Windows OSでのMAC ID(NIC ID) の取得方法

。コマンドプロンプトにて下記コマンドを入力しエンターキーを押下

- ipconfig /all

■ 管理者: コマンド プロンプト
Microsoft Windows [Version 6.1.7601] Copyright (c) 2009 Microsoft Corporation. All rights reserved.
c:¥>ipconfig /all
Windows IP 構成
ホスト名 : WIN7-64 ブライマリ DNS サフィックス : macnica.co.jp ノード タイブ : ハイブリッド IP ルーティング有効 : いいえ WINS プロキシ有効 : いいえ DNS サフィックス検索一覧 : macnica.co.jp
イーサネット アダプター ローカル エリア接続*:
メディアの状態メディアは接続されていません 接続固有の DNS サフィックス: 説明

● UNIX系OSでのMAC ID(NIC ID)の取得方法

。 シェルにて下記コマンドを入力しエンターキーを押下

- ifconfig
 - いずれかの有効なアドレスを使用
 - 下の例:有線と無線のいずれかメイン使用のアドレス

*	root@localhost - + ×
root@loo	calhost:/# ifconfig
eth0	Link encap:イーサネット ハードウェアアドレス 00:ff:77:bb:22:11 UP BROADCAST MULTICAST MTU:1500 メトリック:1 RX/ペケット:0 エラー:0 損失:0 オーバラン:0 フレーム:0 TX/ペケット:0 エラー:0 損失:0 オーバラン:0 キャリア:0 衝突(Collisions):0 TXキュー長:1000
	RX/バイト:0 (0.0 B) TX/バイト:0 (0.0 B)
10	Link encap:ローカルループバック
	inetアドレス:128.0.0.0 マスク:255.0.0.0
	inet6アドレス: ::1/128 範囲:ホスト
	UP LOOPBACK RUNNING MTU: 16436 メトリック:1
	RXパケット:92454 エラー:0 損失:0 オーバラン:0 フレーム:0
	TXパケット:92454 エラー:0 損失:0 オーバラン:0 キャリア:0
	衝突(Collisions):0 TXキュー長:0
	RXバイト:6096399 (6.0 MB) TXバイト:6096399 (6.0 MB)
wlan0	Link encap:イーサネット ハードウェアアドレス 00:11:ee:88:aa:bb
	inetアドレス:192.168.180.1 ブロードキャスト:192.168.255.1 マスク
255.255	255.0
	inet6アドレス: fe80::200:8eff:fe11:aabb/64 範囲:リンク
	UP BROADCAST RUNNING MULTICAST MTU:1500 メトリック:1
	RXパケット:107723 エラー:0 損失:0 オーバラン:0 フレーム:0
	TXパケット:86001 エラー:0 損失:0 オーバラン:0 キャリア:0
	衝突(Collisions):0 TXキュー長:1000
	DV/1

macnica

● 無償版、"Silver"と"Evaluation"の違い

- "Libero Silver ***"
 - 機能限定版。
 - デバイス・ファミリによってサポートされる規模に制限あり。
- "Libero Evaluation ***"
 - 全てのデバイス・ファミリおよび規模の、シミュレーションまでをサポート。
 - 評価ライセンスのためデバイスへのプログラム・ファイル生成不可。



● 正常終了時

Register Product ×
Register - Libero Silver 1 Year Floating License for Windows/Linux with Software ID 568-1cfd-1b9 MAC ID:* 3568abdfafdb Register
Thank you for registering. Your software ld is 689-1cfd-1b8. Your software license will arrive via email within 45 minutes. If you did not receive your license, please contact FPGASoftwareSupport@microchip.com.
Your MAC ID is a 12 character hexadecimal number set with valid characters A-F and/or 0-9. Ex: "1234abcd5678". MAC ID is required for Linux Floating, Linux Node Locked, or Windows Floating, or Synplicity "Server-Based Node-Locked" (SBNL) licenses.
Linux Node Locked or Floating: To obtain the MAC ID, from the Command Prompt type:
/sbin/ifconfig The Ethernet/MAC ID address will be displayed. The MAC ID address is a twelve character hexadecimal number, similar to "00A0C982BEE3". Enter your MAC ID into the registration page window where indicated.
Windows Floating or Synplicity "Server-Based Node-Locked" (SBNL) Licenses: To obtain the PC MAC ID, type the following at a DOS or Command Prompt
C:> Imutil Imhostid or You can also use: C:> <path_to_actel_installation\bin\imhostid></path_to_actel_installation\bin\imhostid>
The Ethernet/MAC ID address will be displayed. The MAC ID address is a twelve character hexadecimal number, similar to "00A0C982BEE3". Enter the 12 character MAC ID into the registration page window where indicated.
In some PC configurations, there can be more than one MAC ID. Use the MAC ID that you know will be the "active" ID. Some users may configure their laptops to have the wired MAC ID for docked laptop use and the wireless MAC ID for undocked use. Tools using the MAC ID depend on the MAC ID being active for use.
Close

macnica

Licenseの入手方法1

- Licenseの種類選択(本資料3~5ページに戻る)より該当のライセンスを
 "Download License"を選択しファイルを保存
- License.zip がダウンロードされる



● Licenseの入手方法2

email による配信

🗄 🤌 🔿 🕇 🧅 🗧 Microsemi Libero Silver 1Yr Floating License for Windows/Linux Server License for 🧼 🚥 🖪	- • ×
ファイル メッセージ 開発 ヘルプ Q 実行したい作業を入力してください	
To Sca	
Microsemi Libero Silver 1Yr Floating License for Windows/Linux Server License for M	acnica ···
SLRSLicenseService@microsemi.com 宛先 ● macnica 2022	→ 転送 ···· 2/06/08 (水) 14:36
1 このメッセージから余分な改行を削除しました。	
License.dat	
	-
Thank you for using Microsemi's Libero software.	

The attached license enables operation of Libero software per the terms of the license agreement you accepted during you	r software
installation.	
Refer the below Libero Software Installation and licensing guide to install the Libero software and setup the license:	
https://www.microschil.com/document/portal/doc_download/151002/nocro-software installation and neersing guide	
If you have any trouble with Libero Software and Licensing installation process, refer the following trouble shooting guide:	
http://www.microsemi.com/index.php?option=com_docman&task=doc_download&gid=130757	
If you have any question on Libers anthrong and lighting, refer the below EAO document.	
https://www.microsemi.com/document-portal/doc_download/136328-libero-soc-software-installation-and-licensing-frequence-installation-and-licensing	ently-asked-
questions	
For more details, visit 'Installation and Licensing Information' section in the Libero Documents Tab in	
http://www.microsemi.com/products/tpga-soc/design-resources/design-software/libero-soc#documents	
For assistance email soc_tech@microsemi.com.	
CI DEI Isanza Carulas Amilerazami sam Missorami Software Lineare Evolution Empil for Software () 432 Abd- 190	^
annenenseen meesturenen urent hall ostin sollmale finalise eybilarion tinali toi sollmalain 452,0006,198	×





● 改版

リビジョン	日付	概要
V1	2017年9月	新規作成
V1.1	2017年9月	加筆修正
V1.2	2018年12月	デザイン変更
V2.0	2020年4月	Libero SoC V12.3 に対応
V3.0	2022年6月	WebのMicrosemi からMicrochip 統合に伴い内容修正

弊社より資料を入手されたお客様におかれましては、下記の使用上の注意を一読いただいた上でご使用ください。 1. 本資料は非売品です。許可なく転売することや無断複製することを禁じます。

- 2. 本資料は予告なく変更することがあります。
- 3. 本資料の作成には万全を期していますが、万一ご不明な点や誤り、記載漏れなどお気づきの点がありましたら、弊社までご一報いただければ幸いです。
- 4. 本資料で取り扱っている回路、技術、プログラムに関して運用した結果の影響については、責任を負いかねますのであらかじめご了承ください。
- 5. 本資料は製品を利用する際の補助的な資料です。製品をご使用になる場合は、英語版の資料もあわせてご利用ください。

